

# 87IRL - CS001 - ROOF RACK

**FITTING FOR:**

**PEUGEOT PARTNER 2018+ LWB (L3)**



## **INSTALLATION INSTRUCTIONS**

### **ATTENTION!**

- Check the box before installation.
- Read the guide before installation for your safety and making complete installation.
- Make the installation according to the installation guide otherwise, our company has no responsibility for any damage.
- If you any have questions please contact our company.














# INSTALLATION OF CROSS PROFILES

**WARNING: THIS PROCESS WILL BE MADE BEFORE 5TH STEP IN THE PRODUCT GUIDE.**



**CROSS PROFILES WILL BE MOUNTED TO 4TH HOLE AFTER EVERY 3 HOLES AS SHOWN ON FIGURE ABOVE.**

# NECESSARY MATERIALS

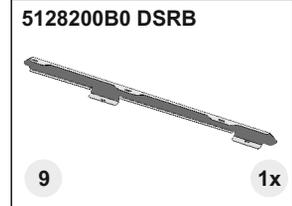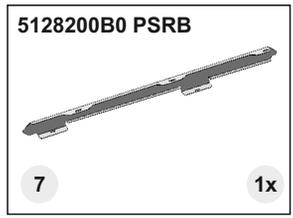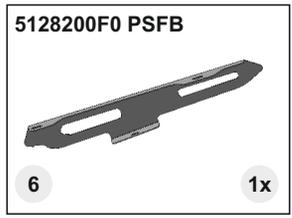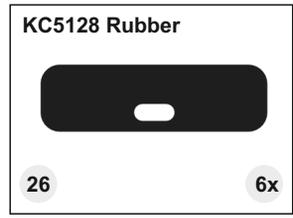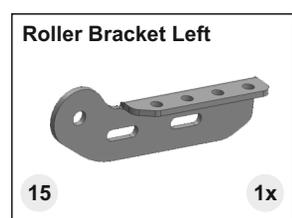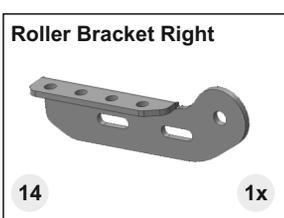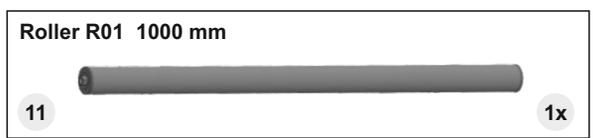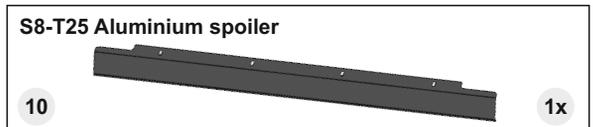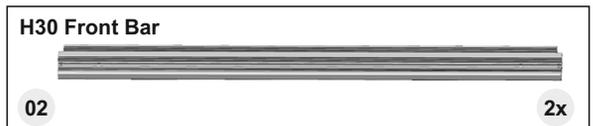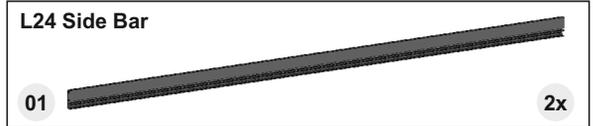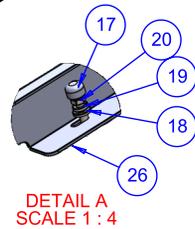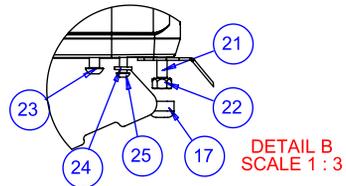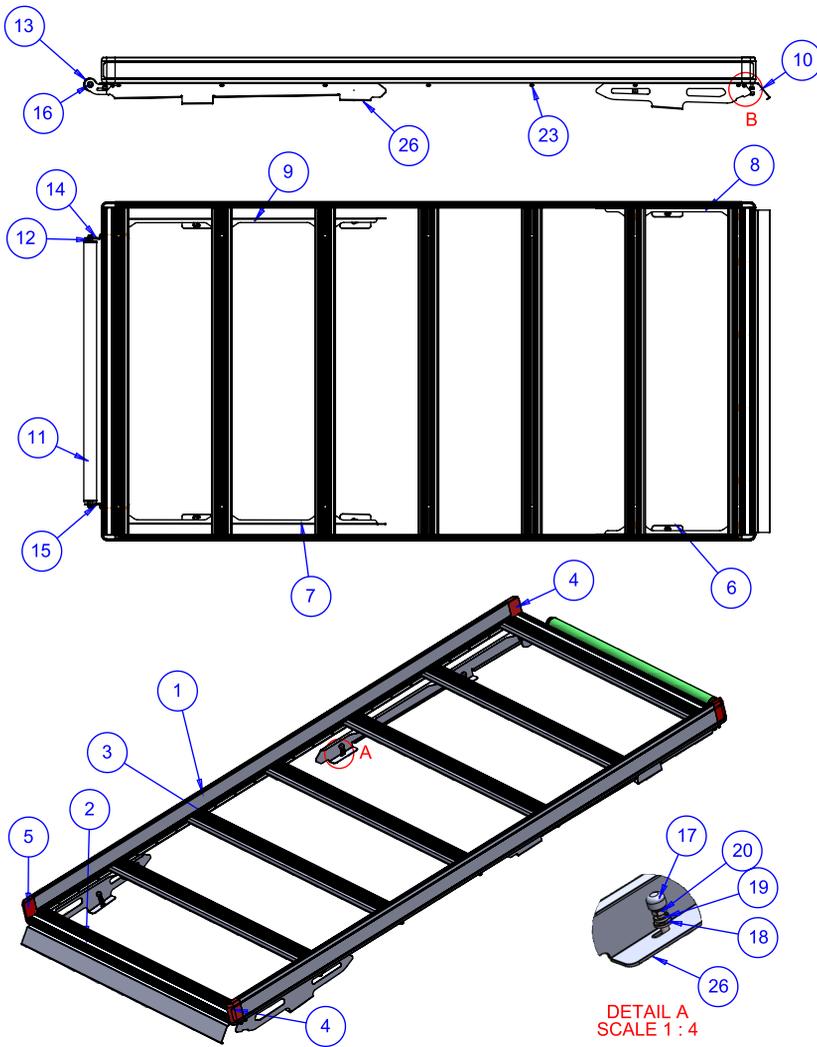

## NECESSARY TOOLS


Allen Key 5 mm
Spanner 13 mm
Meter



ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AP1 - L24 - 2451 mm	Side Bar	2
2	AP3 - H30 - 1300 mm	Front Bar	2
3	AP2 - W30 - 1300 mm	Cross Bar	5
4	C5-AK1--2	Cap Right	2
5	C5-AK1--1	Cap Left	2
6	5128200F0	Passenger Side Front Bracket	1
7	5128200B0	Passenger Side Rear Bracket	1
8	5128200F0	Driver Side Front Bracket	1
9	5128200B0	Driver Side Rear Bracket	1
10	S8T25	Aluminium Spoiler	1
11	Roller R01	1000mm	1
12	P9-C3 R3	M10 Nut	2
13	P9-C3 R2	Roller Plastic	2
14	Roller Yan aparat	Right	1
15	Roller Yan aparat	Left	1
16	M10x20 AKB Bolt	Stainless-Chrome	2
17	M8 Bolt's Cab	Black-Plastic	24
18	M8 Wide Washer	Stainless-Chrome	6
19	M8 Spring washer	Stainless-Chrome	6
20	M8x25 AKB Bolt	Stainless-Chrome	6
21	M8x20 AKB Bolt	Stainless-Chrome	18
22	M8 AKB Nut	Stainless-Chrome	18
23	M8x25 Allen Bolt	Stainless-Chrome	14
24	M6 Spring Washer	Stainless-Chrome	4
25	M6x16 Allen Bolt	Stainless-Chrome	4
26	KC5128 Rubber	Rubber-Black	6
27	Sista Silikon	Silikon Package	1

# INSTALLING BRACKETS TO THE ROOF RACK


REAR

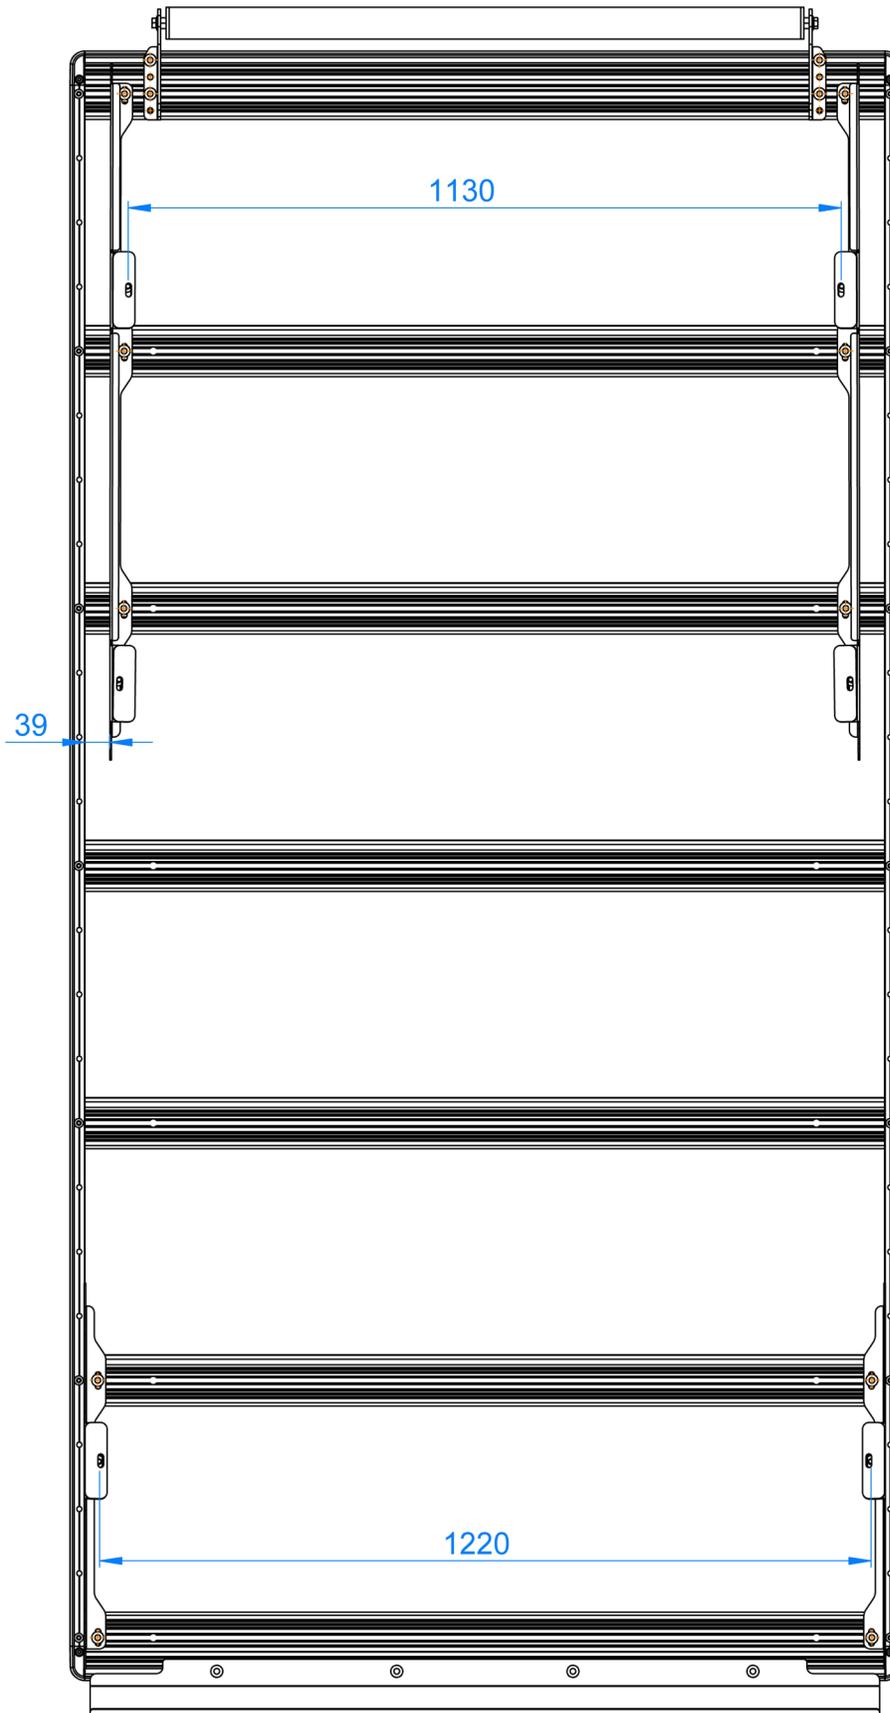


FRONT



## ASSEMBLY OF THE ROOF RACK ON THE VEHICLE

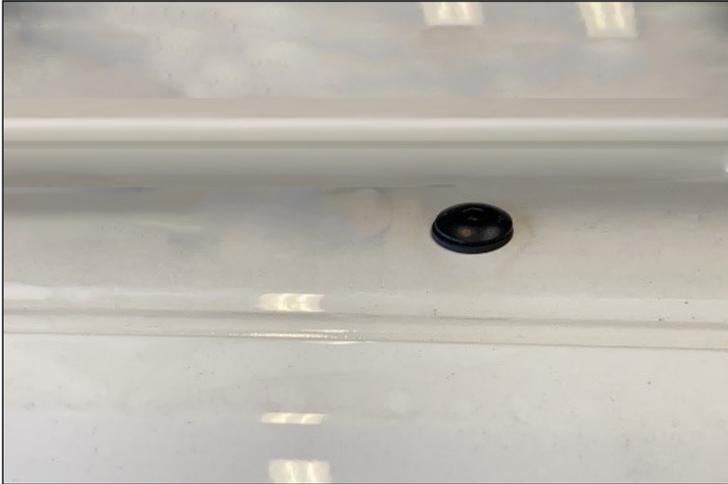


**STEP-1** Remove factory rubber plugs as shown.

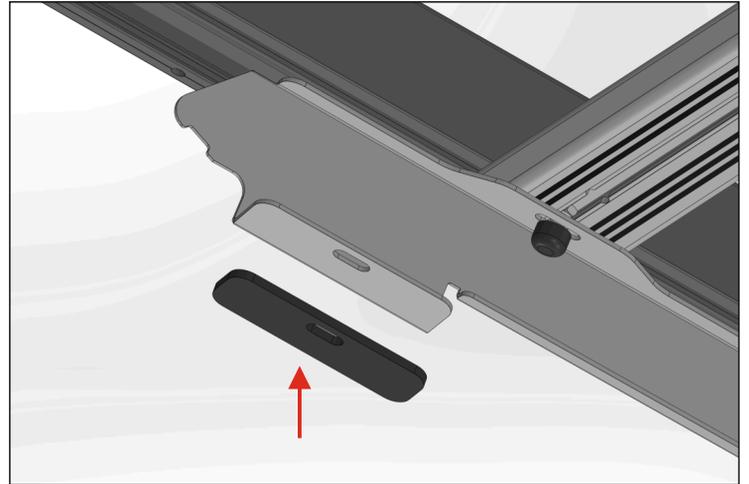

**STEP-2** Put supplied rubber part in the bottom part of the bracket on the vehicle.




**STEP-3** Match holes of the assembled roof rack to holes on the vehicle.

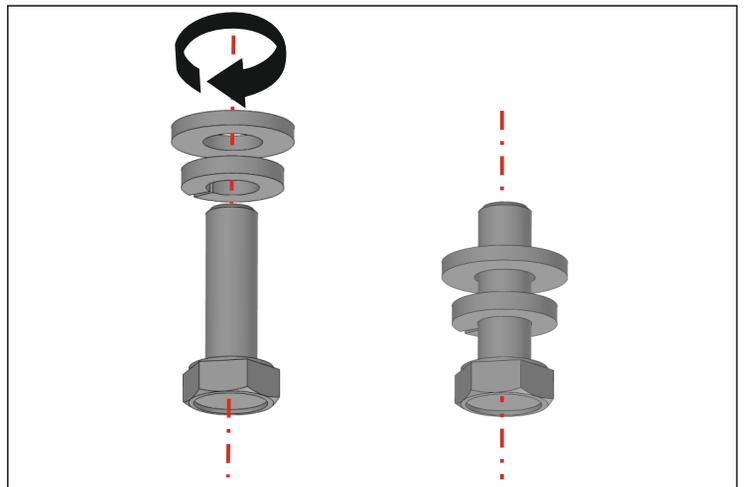

**STEP-4** Attach spring washer first then flat washer to M8x25 hex bolts

**STEP-5** Apply the silicon around the hole and pass to 6th step before it gets dry.

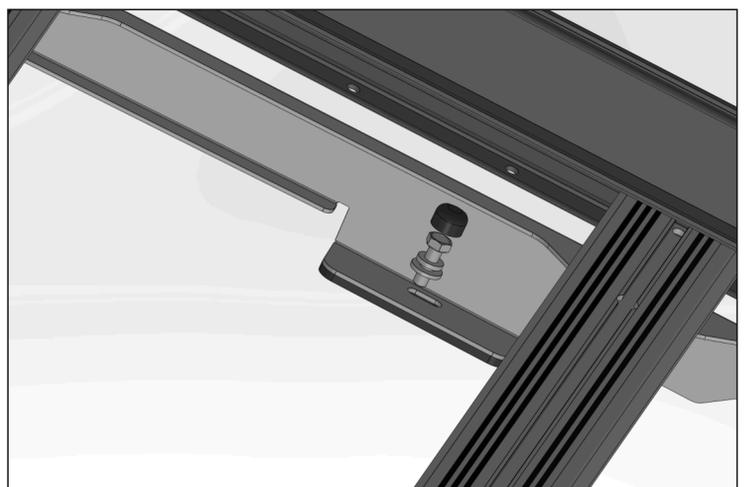

**STEP-6** Fix the bracket with bolt to the holes on the vehicle. Repeat this process for all brackets.

**CONTROL ALL INSTALLATION AND FINISH ASSEMBLY AFTER INSTALLING PLASTIC BOLT CAPS TO M8 HEX NUTS.**



