


VPRO OY 3125 VW T5 / TRANSPORTER 2010- / T6, ALL MODELS ** FITTING INSTRUCTIONS

To mount this product you will need Sikaflex 252 glue, Sikaflex primer and Sikaflex cleaner (not supplied with the kit).

- 1. Place the side bracket on the A-pillar so that the bottom side is 590mm ±5mm from the bottom line of the A-pillar (picture 1) and there is 12mm gap above and 10mm gap below between inner side of the bracket and the A-pillar (picture 2). Check that the hole in the middle of side bracket is toward window.
- 2. Mark the hole positions and drill the holes with 4,0 mm bit.
- 3. Mark the area of the side bracket. Clean the area with cleaner and the backside of the bracket with cleaner.
- 4. Apply the primer on the cleaned areas and let it react for 15 minutes.



picture 1

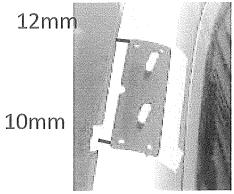



picture 2




3125 VW T5 / TRANSPORTER 2010- / T6, ALL MODELS ** FITTING INSTRUCTIONS


- 5. Apply Sikaflex 252 on the backside of the side bracket and place it on the A-pillar (at least 3 wide stripes). (picture 3)
- 6. Apply Sikaflex 252 into the holes and mount the side bracket on the A-pillar with 4,8x19mm screws.








10. Mount the warning label on a place where the driver can see it. Remember to tighten all screws after few hours drive and every 6 months.

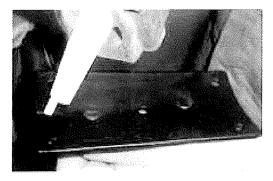

picture 3

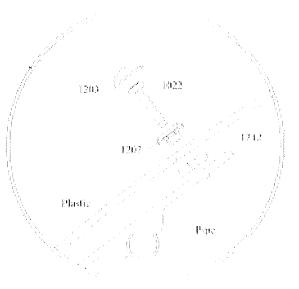

picture 4

WARNING!

The speed limit for the vehicle with the visor mounted is 130 km/h. If you drive constantly faster than 130 km/h the visor may tear off!

ANY NON-COMPLIANCE WITH THESE REGULATIONS CAUSE NO RESPONSIBILITY TO THE MANUFACTURER OF ANY COSTS AND DAMAGES.