

# Mounting instructions

Side bar series: GM - GC- RM - RC - BM - BC

## Ford Transit 2014+ Frontwheeldrive Ford Custom 2012+



SW13 (23 Nm)



SW17 (46 Nm)












45 Min.







Version: October 2017











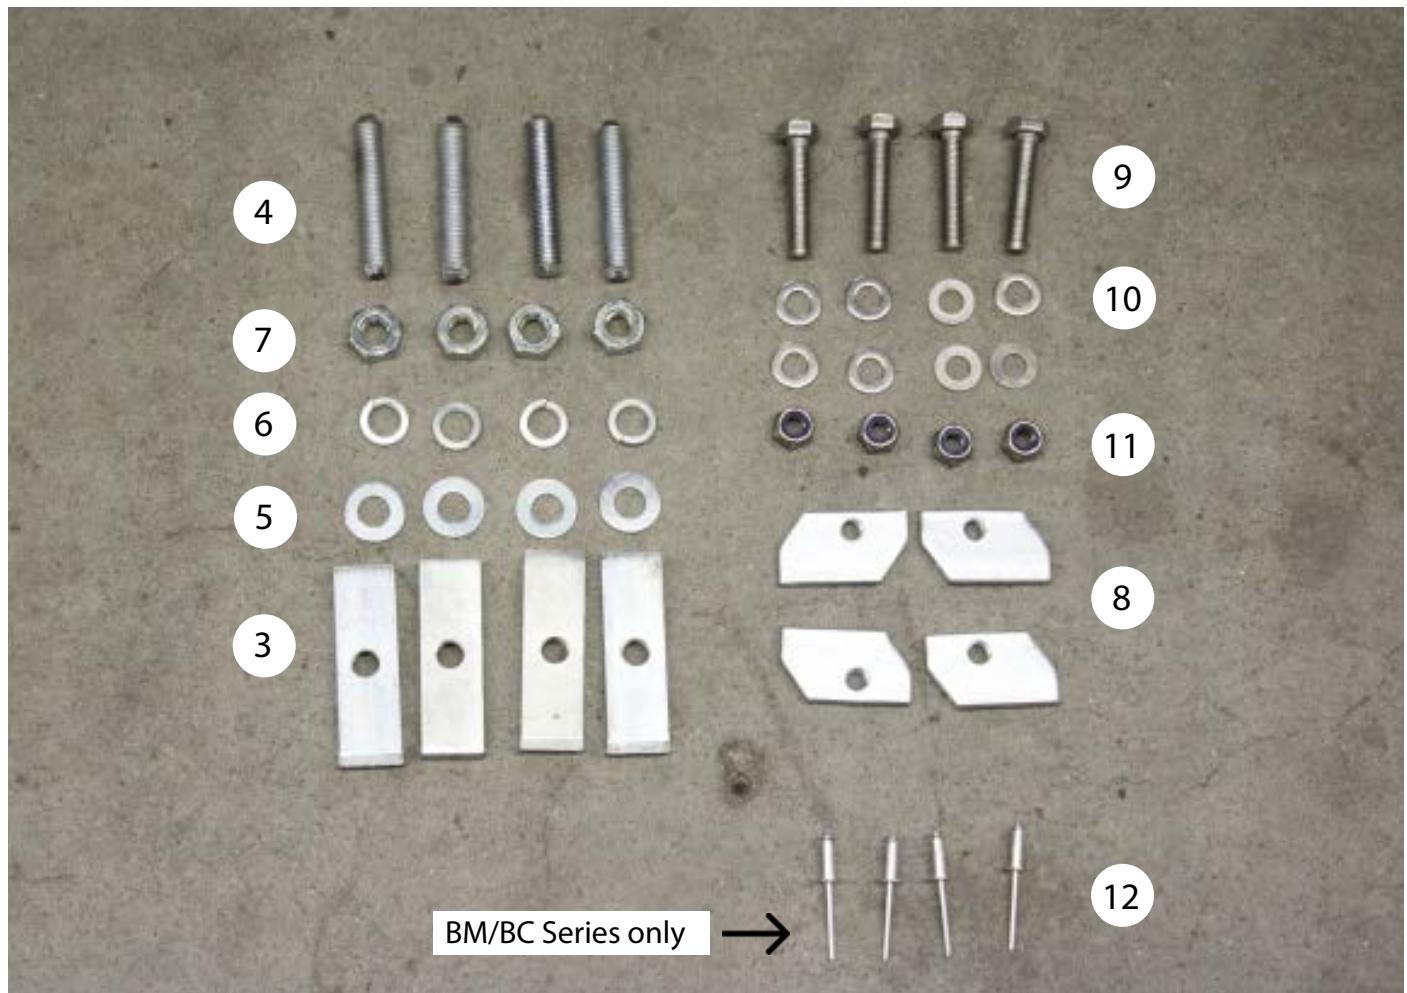

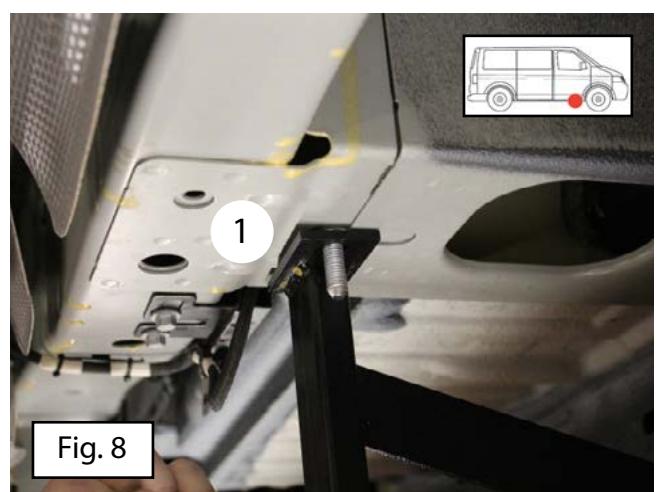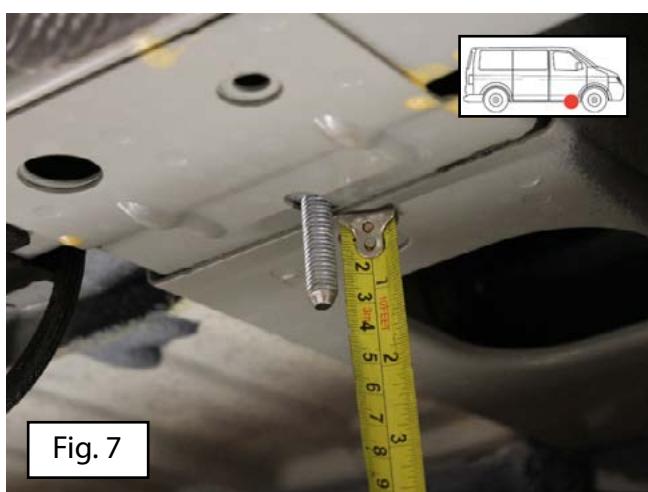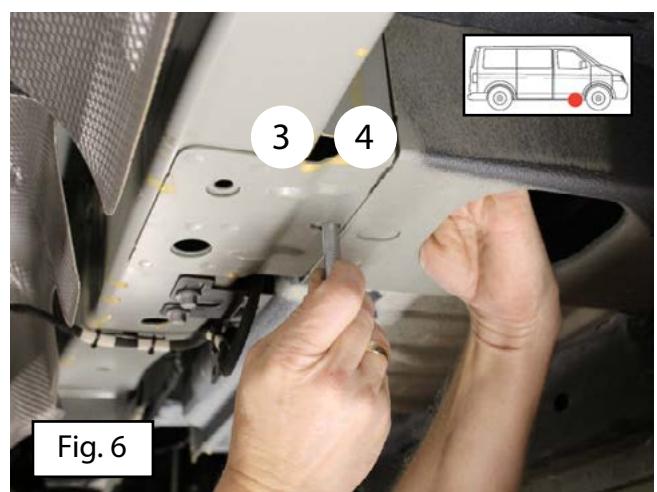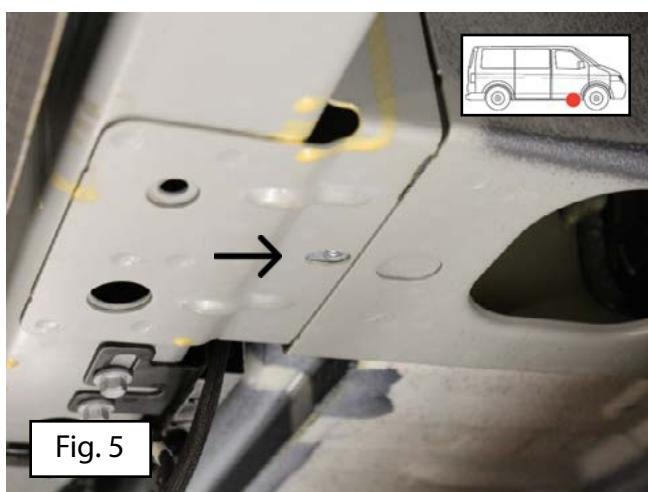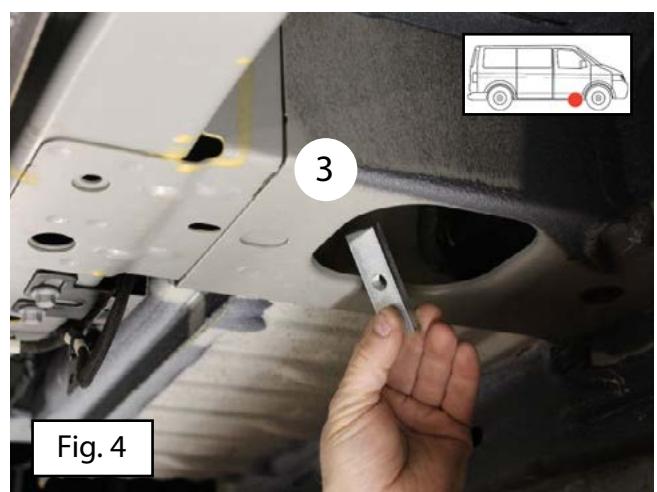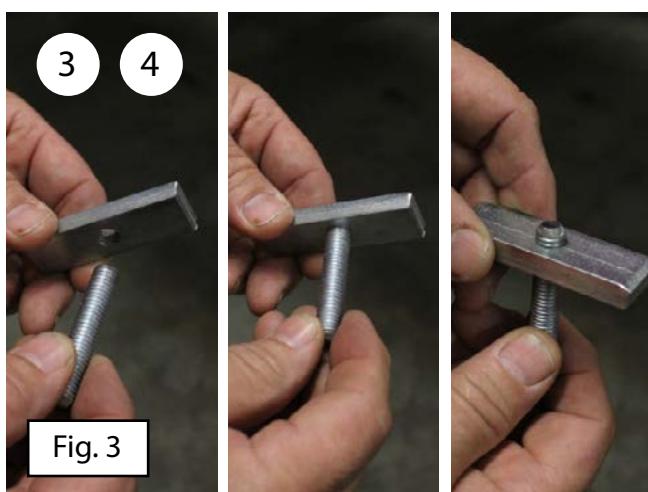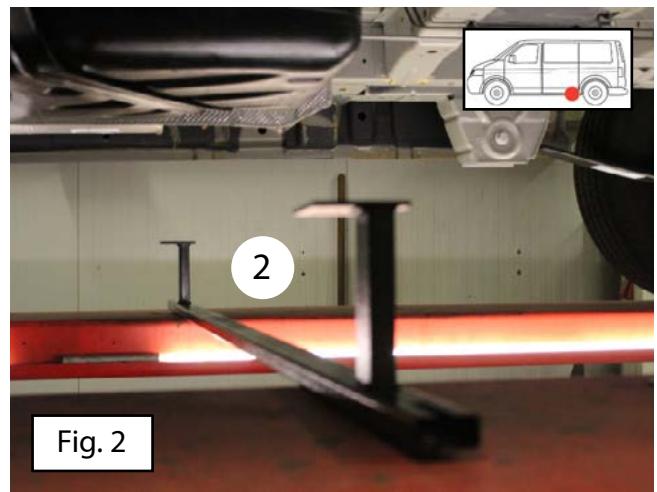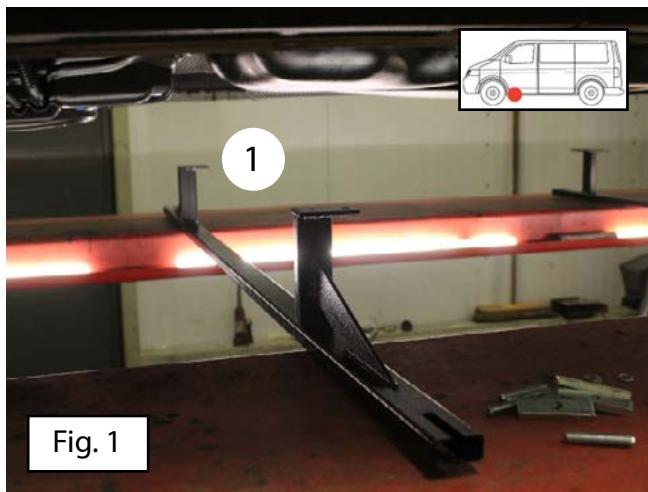

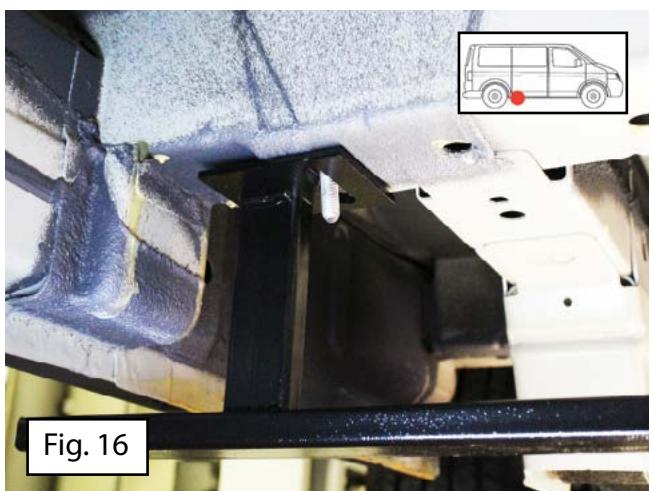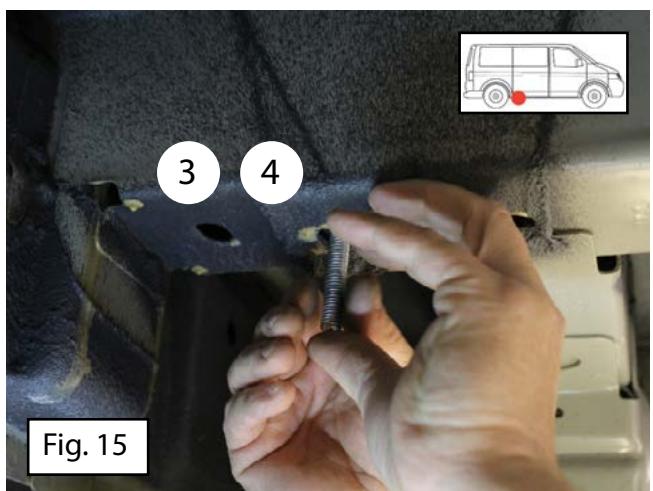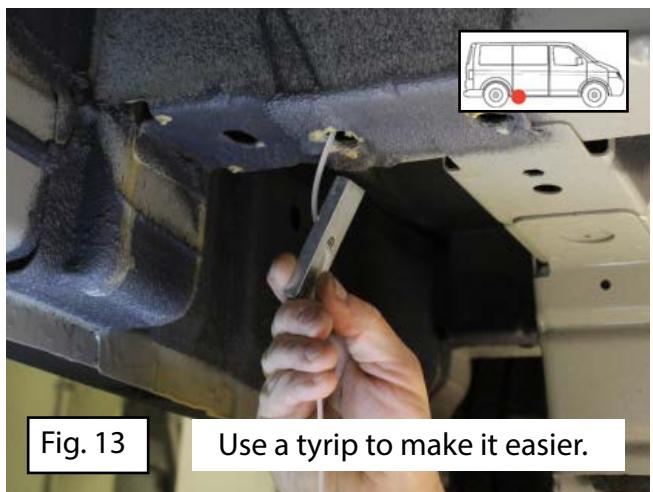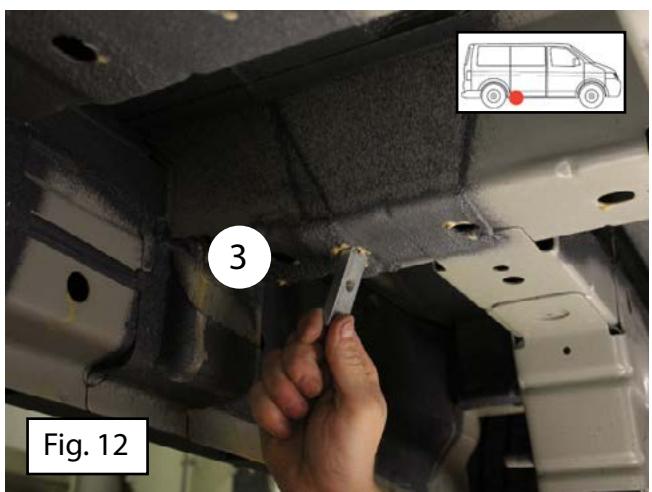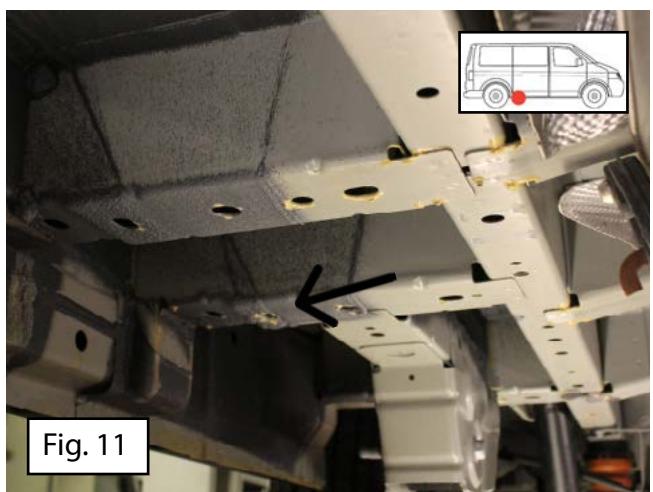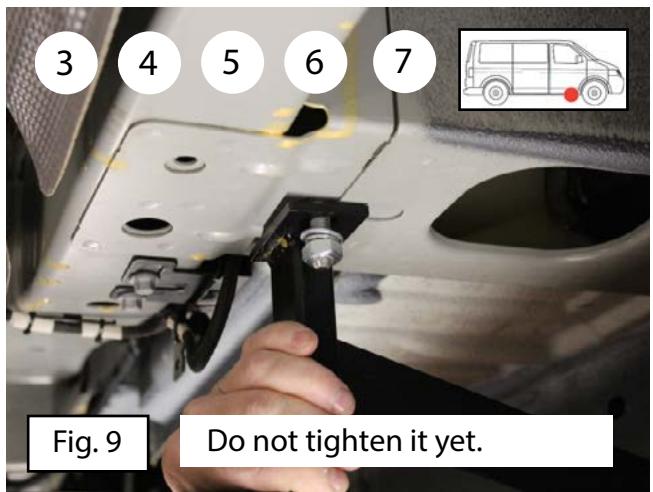

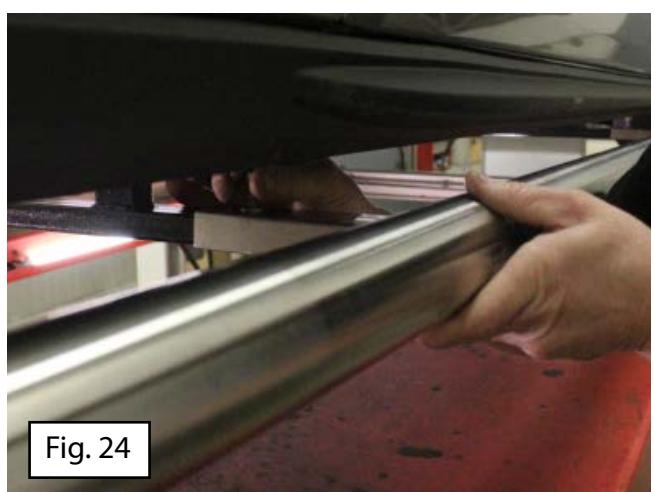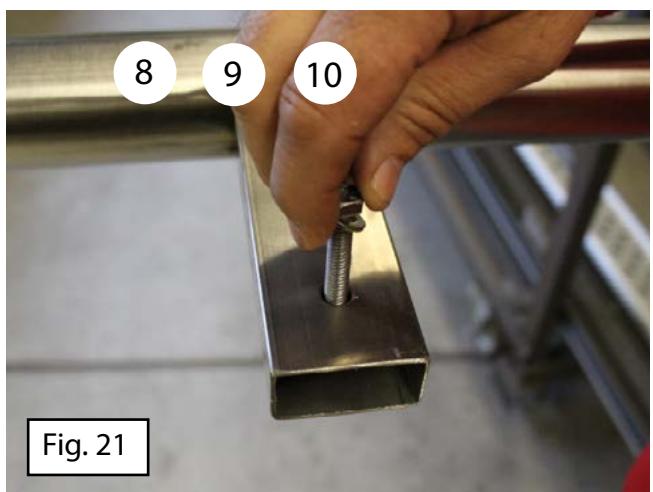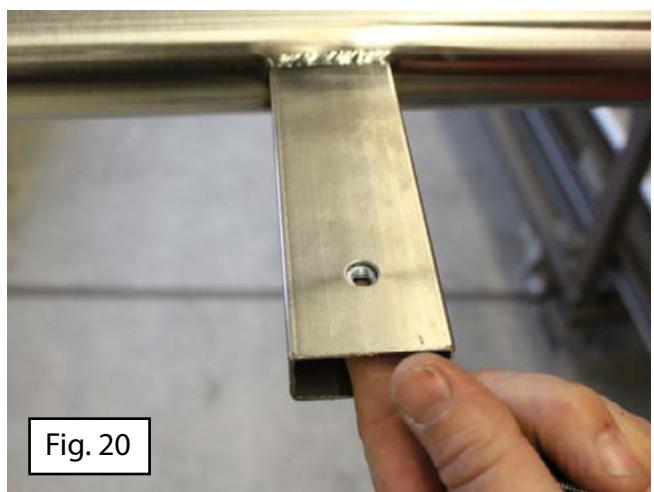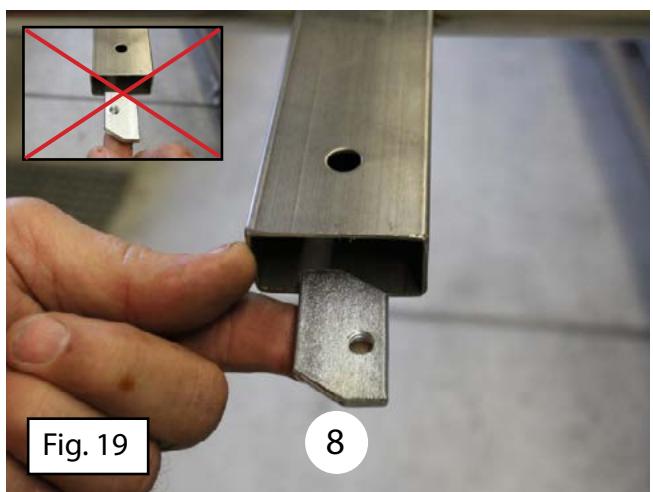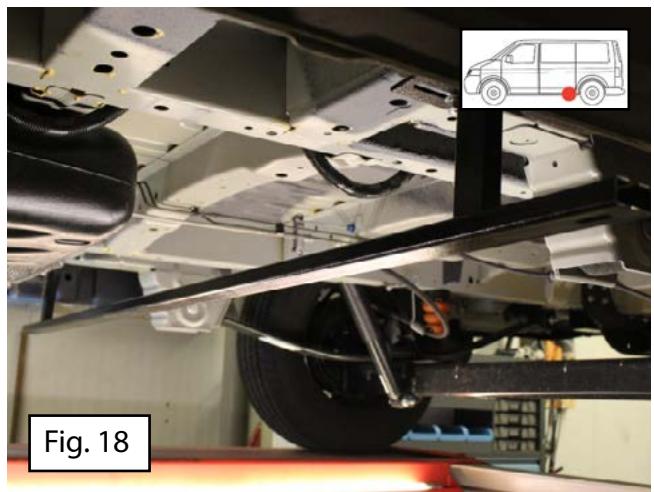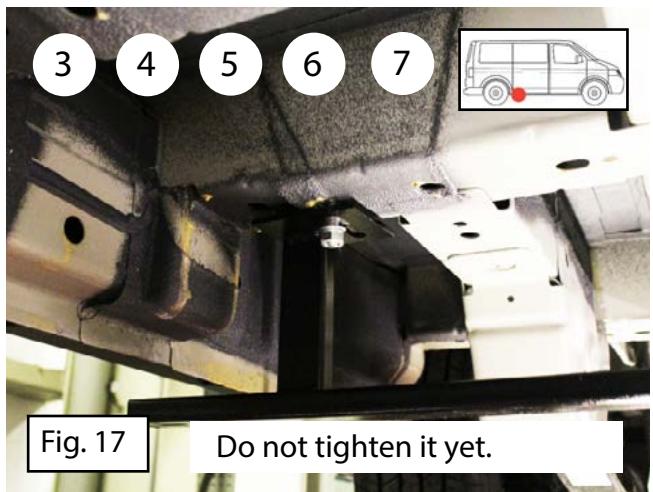

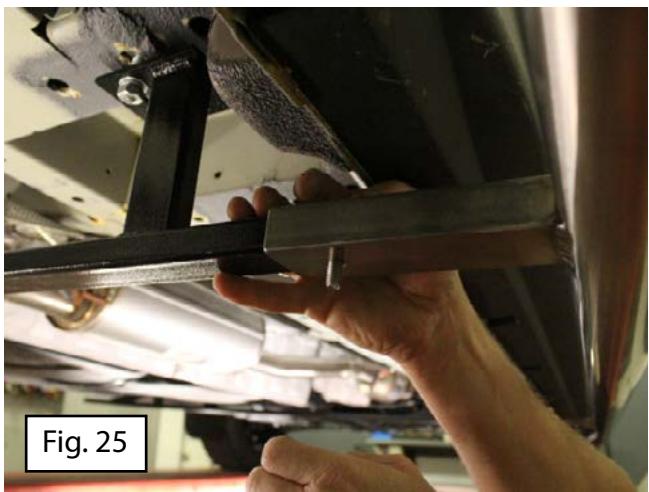


Fig. 25

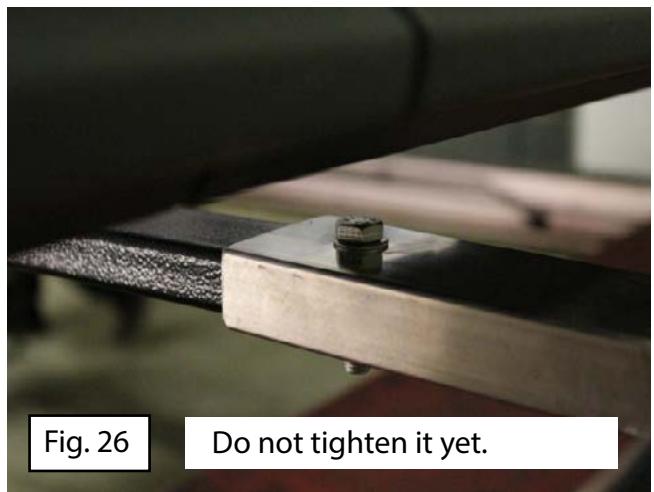


Fig. 26

Do not tighten it yet.

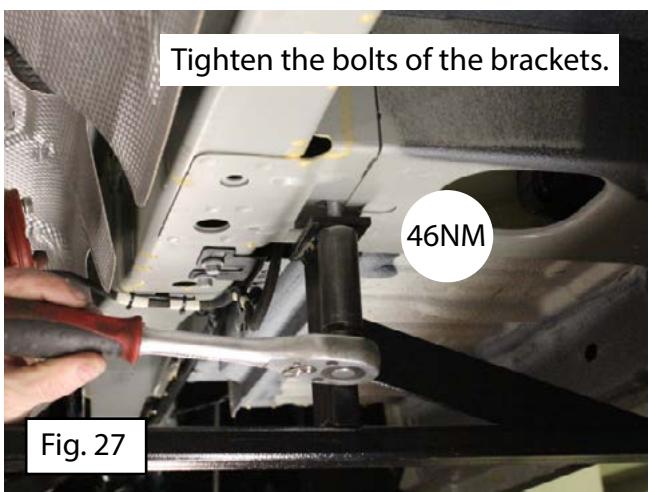


Fig. 27

Tighten the bolts of the brackets.

46NM



Fig. 28

Slide the Side bar to the desired distance.

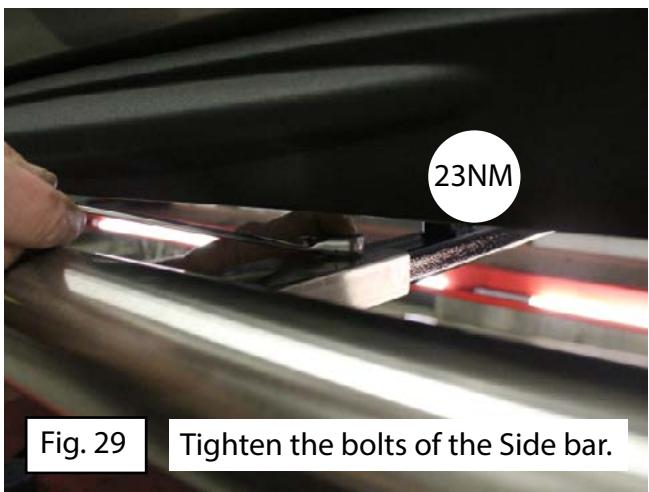


Fig. 29

Tighten the bolts of the Side bar.

23NM



Fig. 30

Use grease

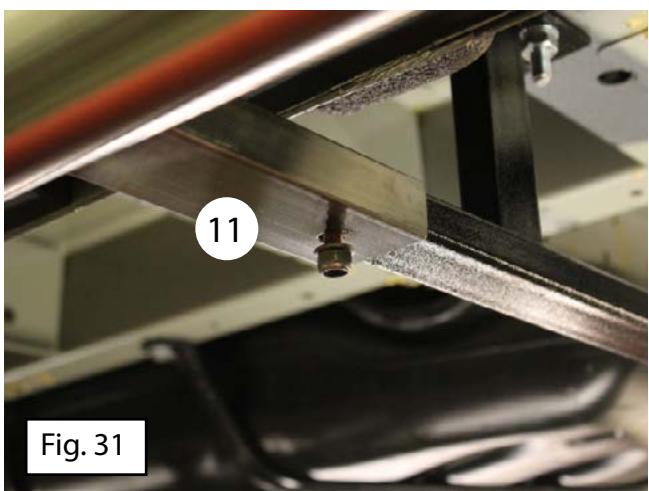


Fig. 31

11

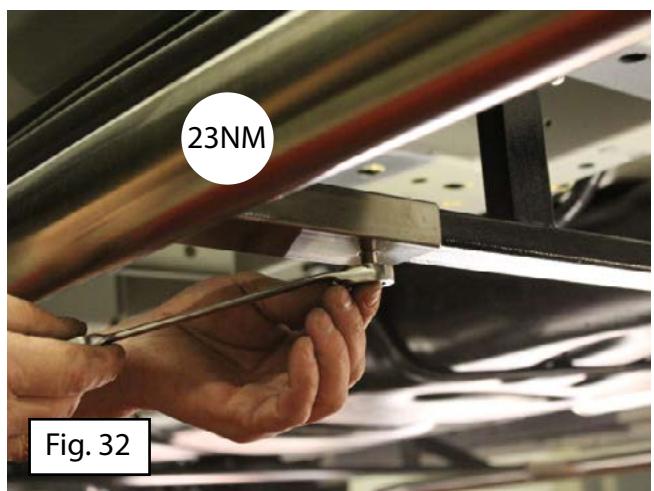


Fig. 32

23NM

# Matching accessories:

