



FORD TRANSIT MWB/LWB 2014 - PRESENT

CODE : 2137 - 2141

PRODUCT : AB034 - AB008



50 Min.

FORD TRANSIT MWB/LWB 2014- PRESENT

12		DIN 6921;M10x25
12		DIN 6923;M10



2X





1X



2X




2X

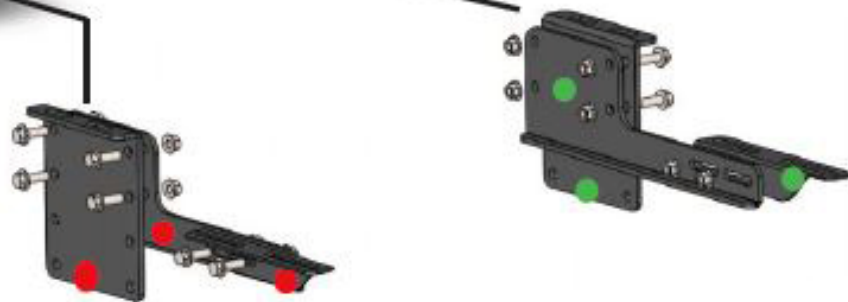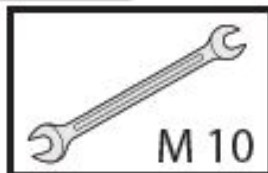



5

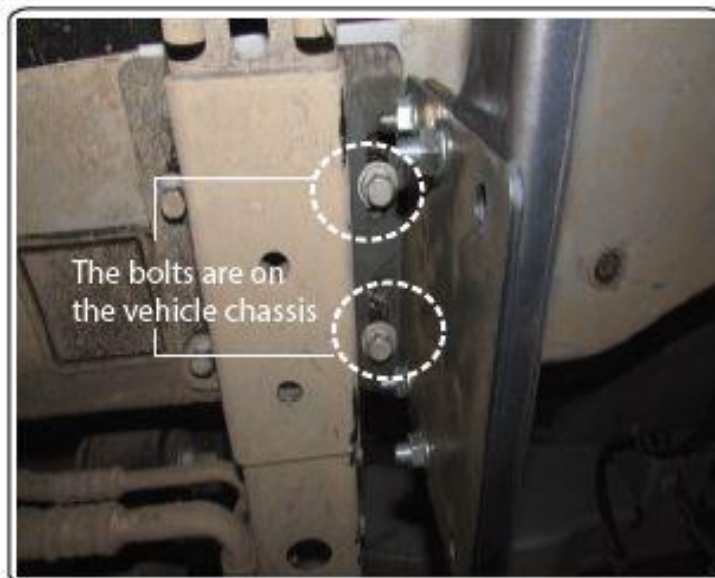




The bolts are on the vehicle chassis



DIN 6923;M10



DIN 6921;
M10x25

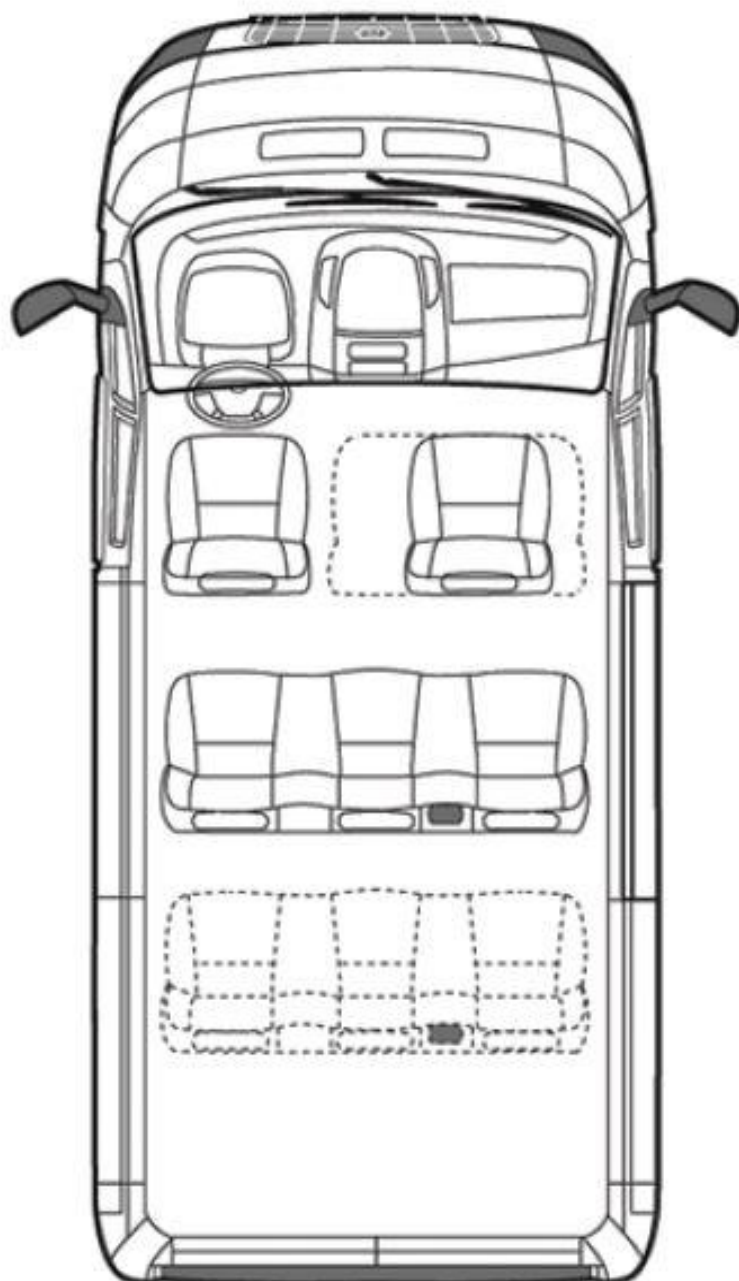

RED

GREEN



DIN 6921 M10



DIN 6923 M10



DIN 6923 M10



DIN 6921 M10



M5:
8 lb-ft
M6:
15 lb-ft
M8:
18.5 lb-ft
M10:
37 lb-ft

