




RENAULT MASTER LWB MWB

156-157-158 KIT OR

INSTRUCTION


ITEM NO.	PART NAME	QNT.
1	ISO 8678-M10X35-28-N (STAINLESS)	6
2	Hex Flange Nut DIN 6923 - M10(STAINLESS)	6
3	PLATE 75x40x8mm (HTC OR6)	6
4	HTC 283 - (4X60X35)	6
5	156-157-158 KIT OR Rear Left	1
6	156-157-158 KIT OR Center Right	1
7	156-157-158 KIT OR Front Right	1
8	156-157-158 KIT OR Rear Right	1
9	156-157-158 KIT OR Front Left	1
10	156-157-158 KIT OR Center Left	1
11	Hex Flange Nut DIN 6923 - M10	6
13	M10X40 DIN 603	6

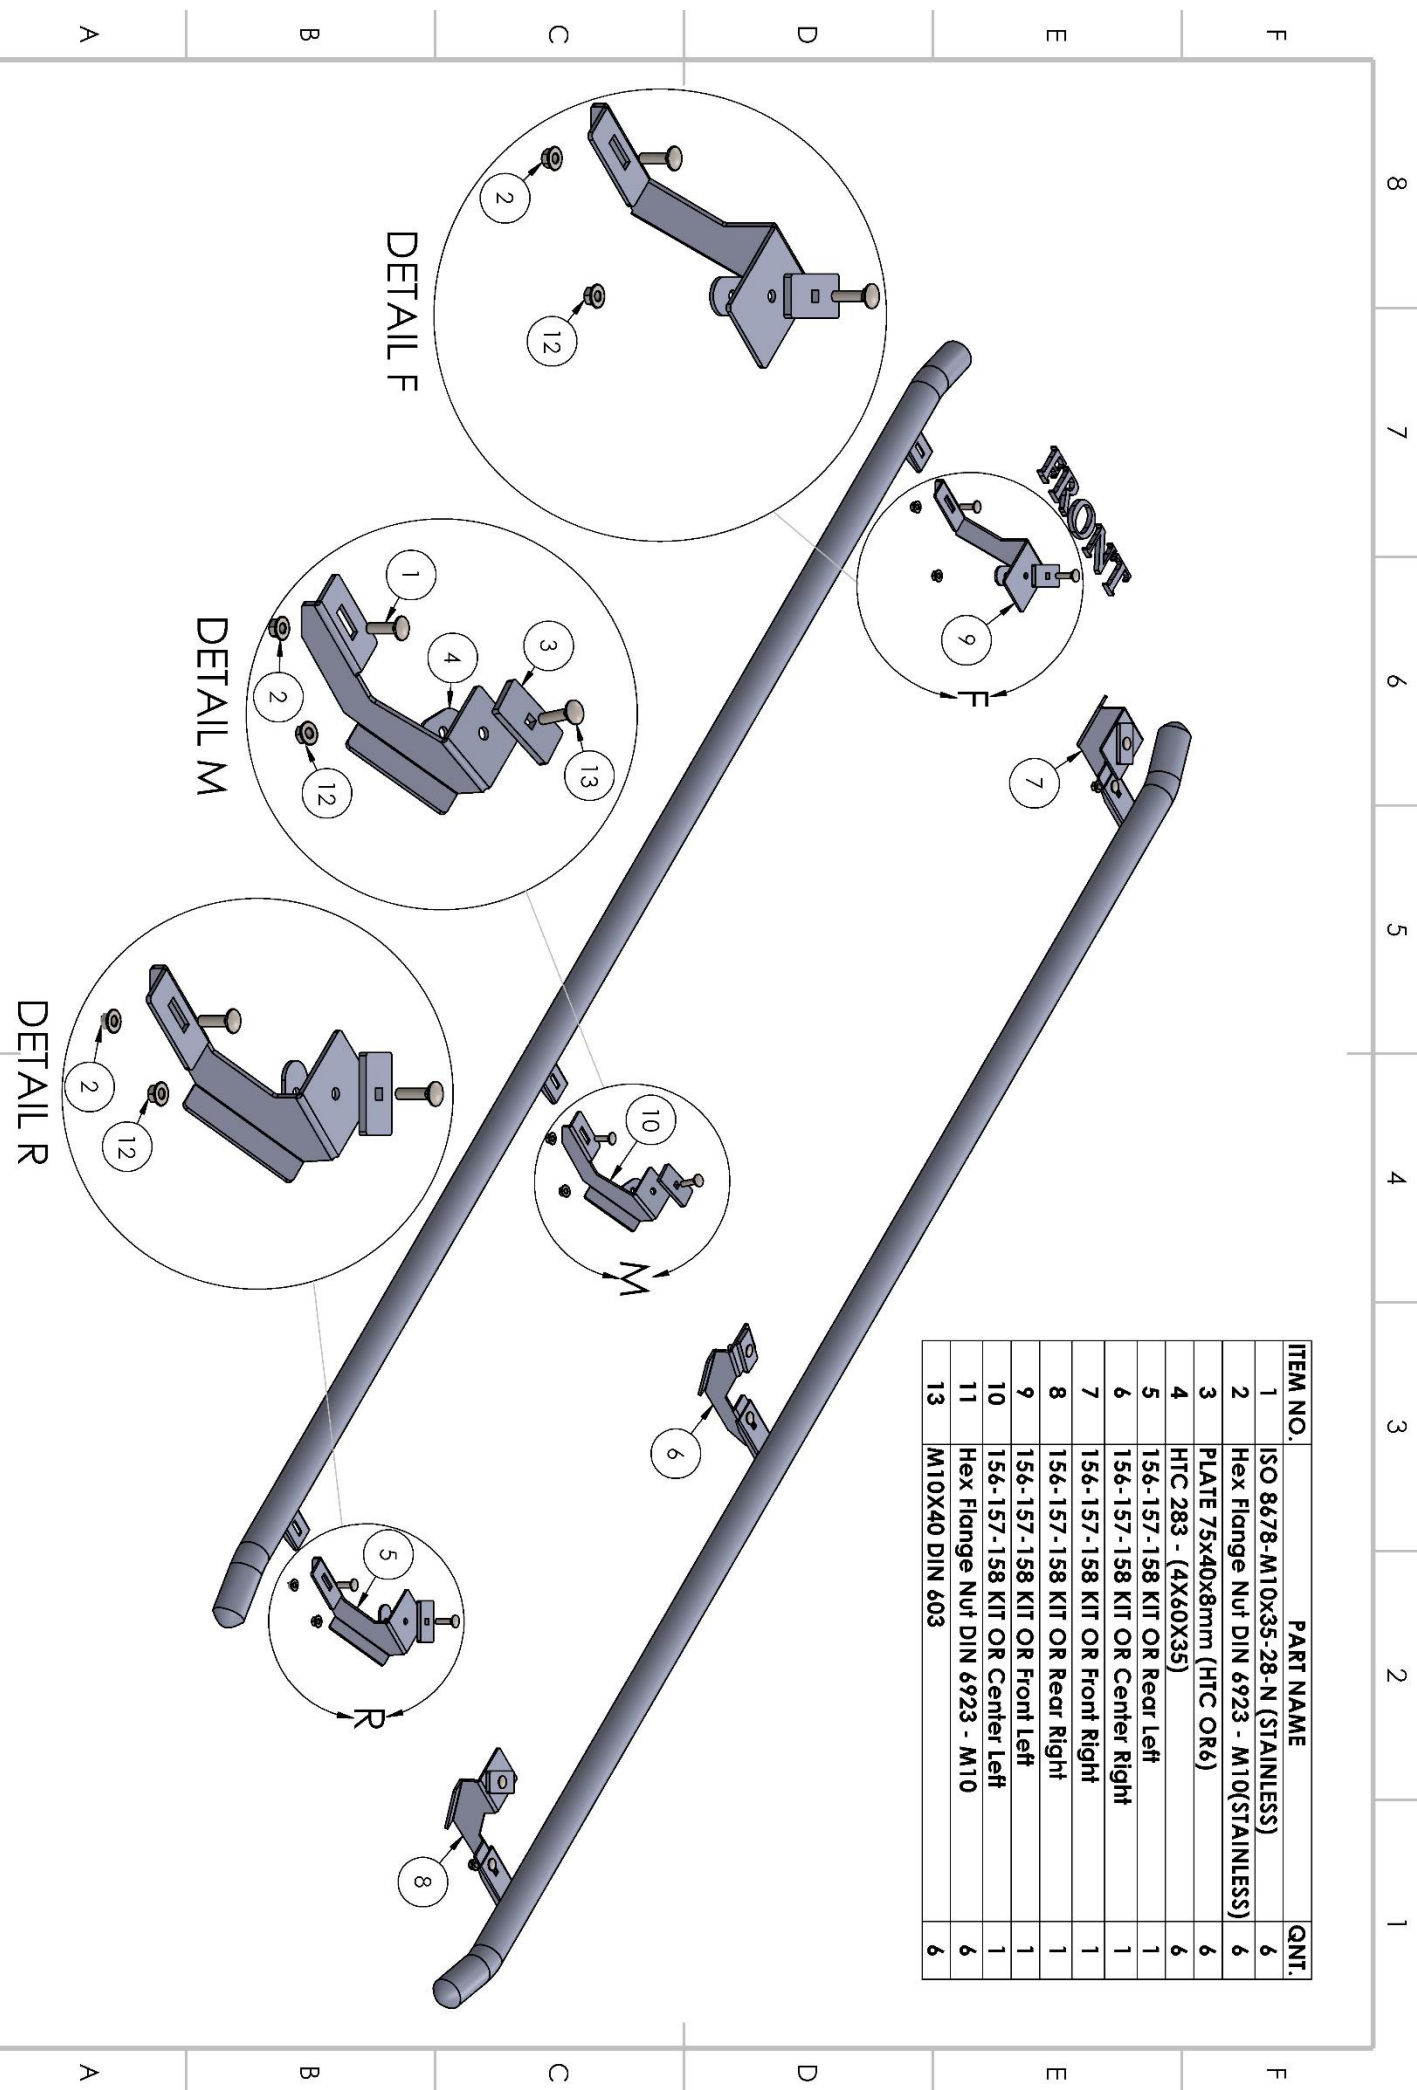


8 7 6 5 4 3 2 1

A B C D E F


A B C D E F

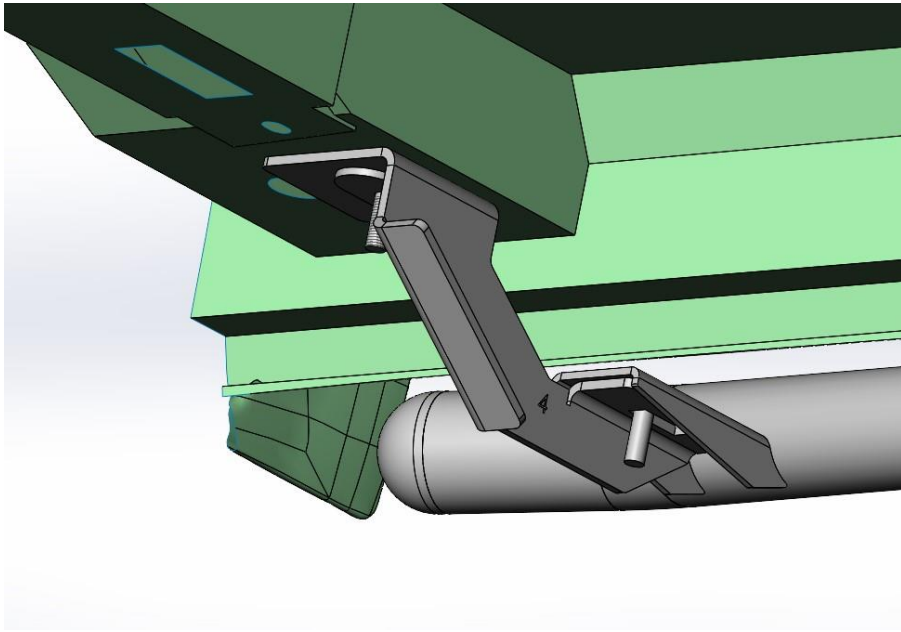


FRONT RIGHT

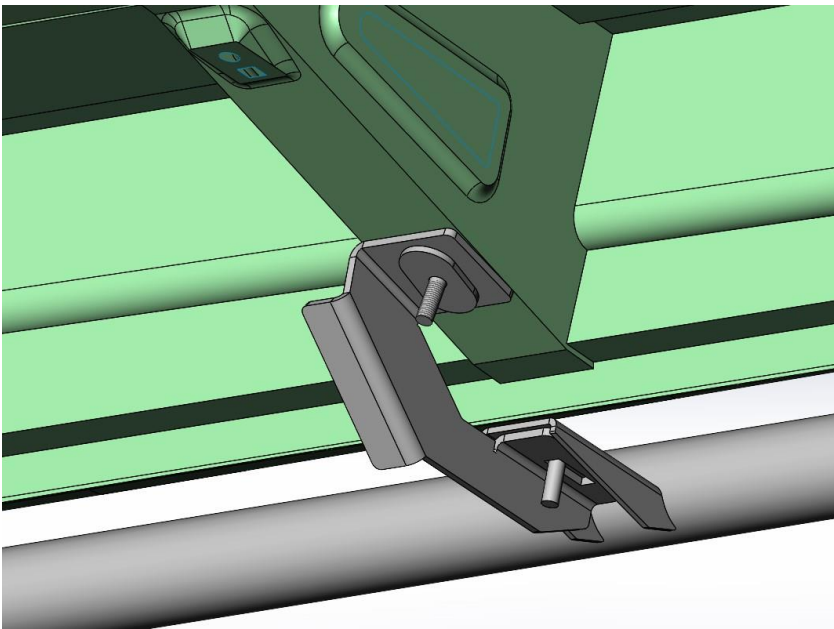


MIDDLE RIGHT

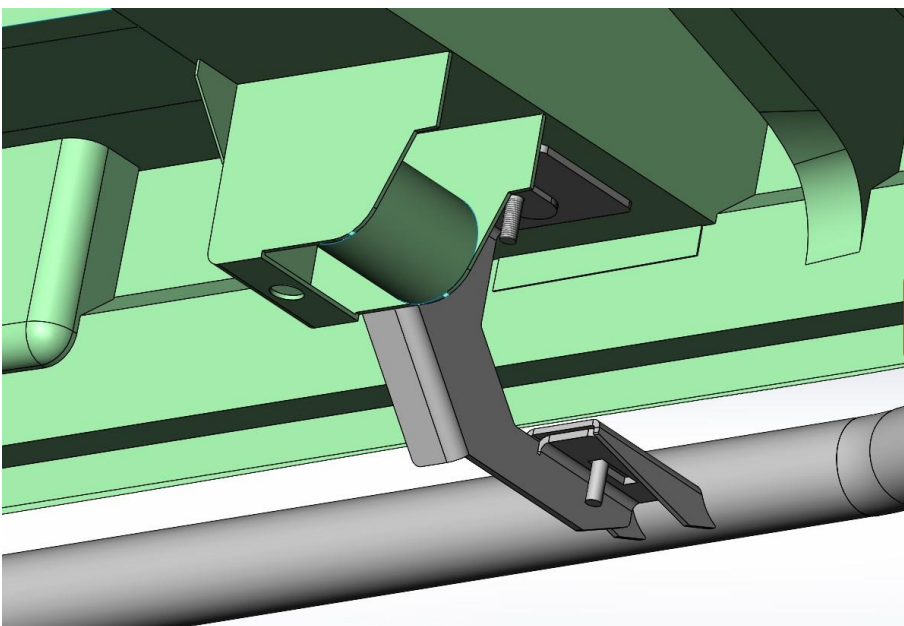


REAR RIGHT

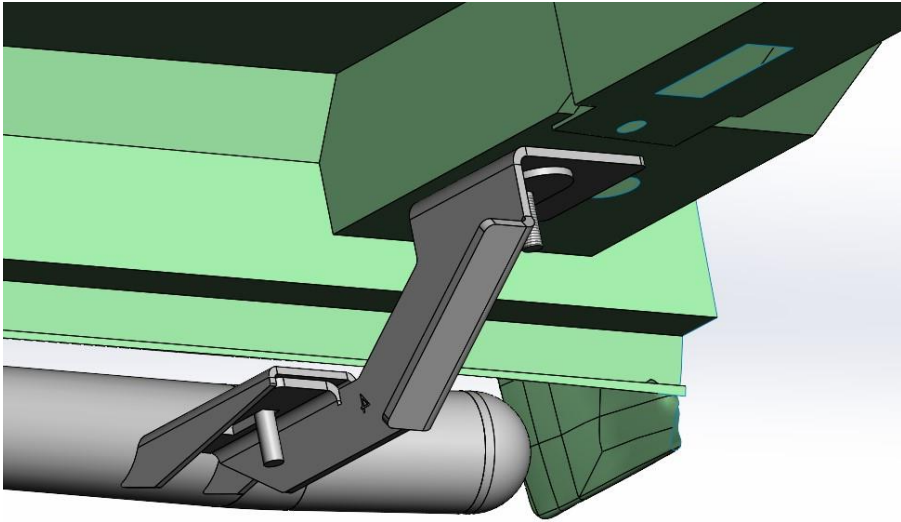

FRONT LEFT

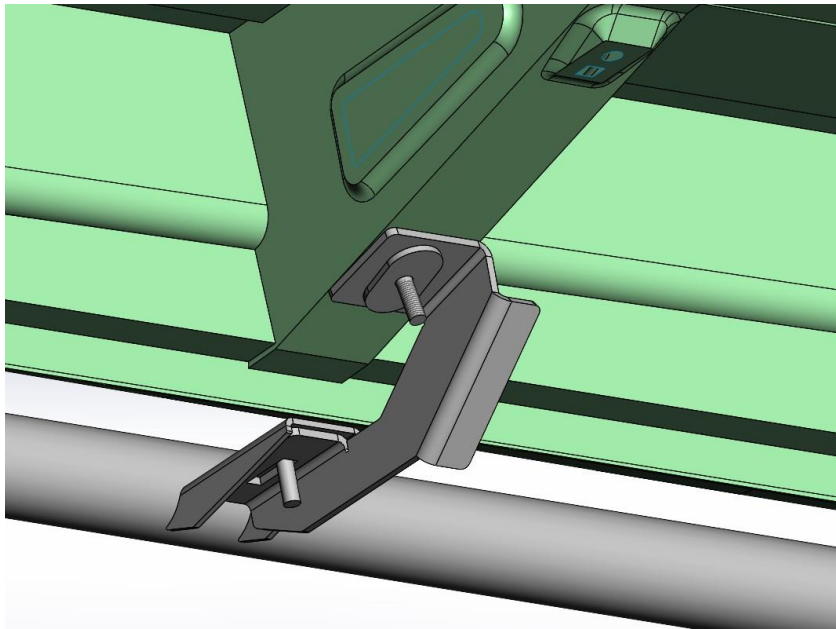

MIDDLE LEFT

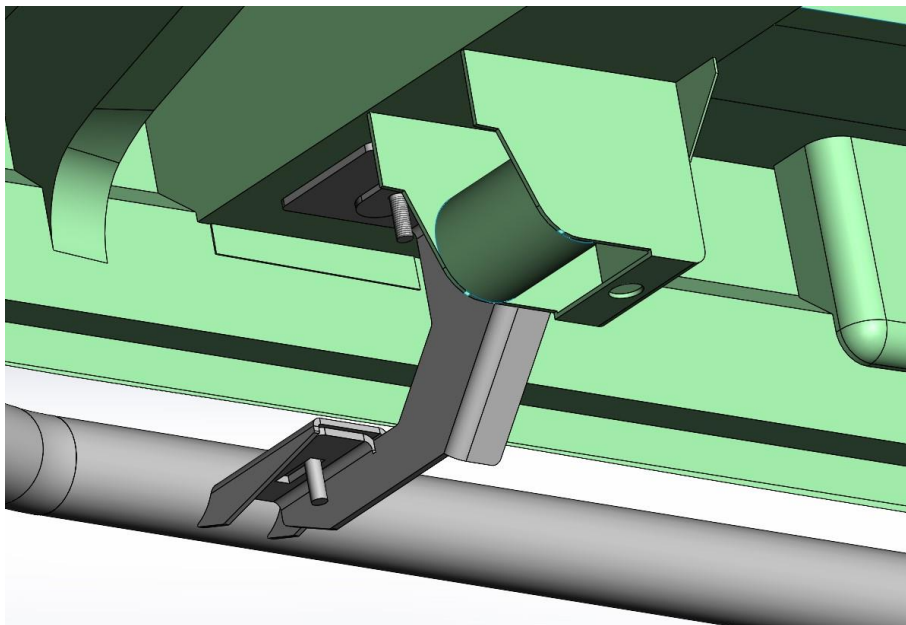

REAR LEFT