

47IRL - CS001 - ROOF RACK

FITTING FOR:

FIAT DUCATO 2015+ MWB (L2H2)



INSTALLATION INSTRUCTIONS

ATTENTION!

- Check the box before installation.
- Read the guide before installation for your safety and making complete installation.
- Make the installation according to the installation guide otherwise, our company has no responsibility for any damage.
- If you any have questions please contact our company.









INSTALLATION OF CROSS PROFILES

WARNING: THIS PROCESS WILL BE MADE BEFORE 5TH STEP IN THE PRODUCT GUIDE.




CROSS PROFILES WILL BE MOUNTED AS SHOWN ON FIGURE ABOVE.

NECESSARY MATERIALS

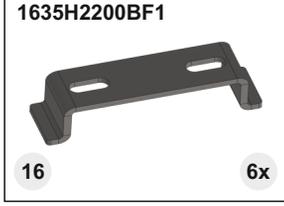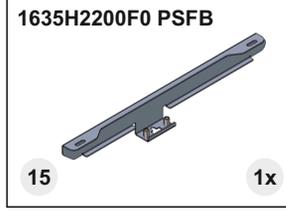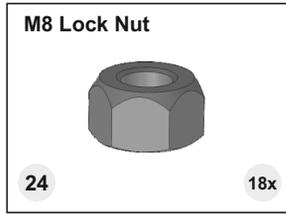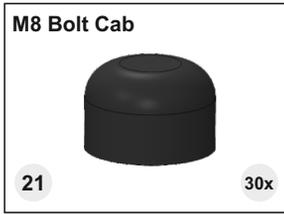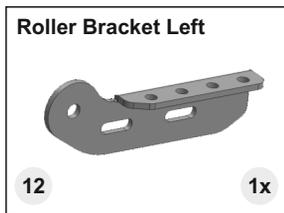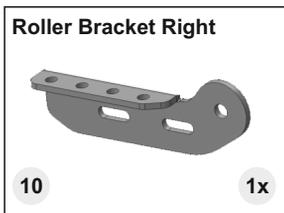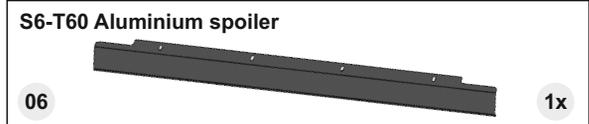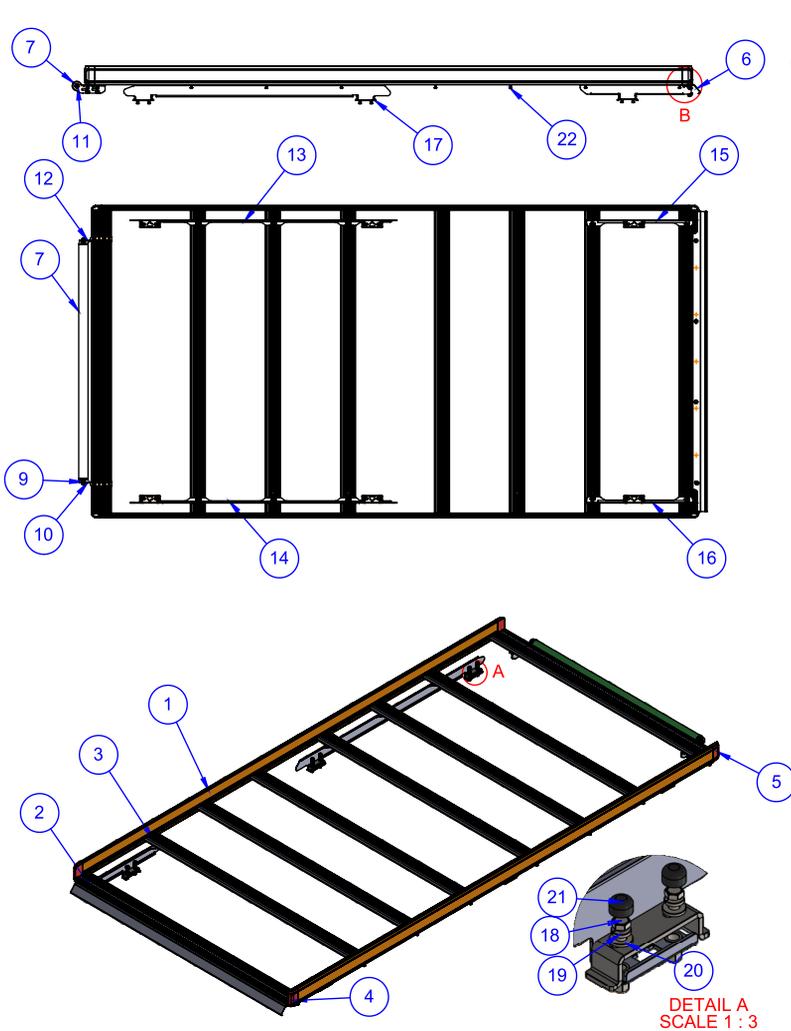

NECESSARY TOOLS


Allen Key 5 mm
Spanner 13 mm
Meter

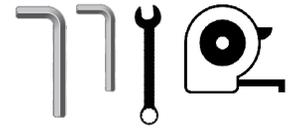

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	L31 - 3158mm	Side Bar	2
2	H65 - 1650mm	Front Bar	2
3	W65- 1650mm	Cross Bar	6
4	C8-AK1--1	Cap Right	2
5	C8-AK1--2	Cap Left	2
6	S6T60	Aluminium Spoiler	1
7	Roller R25	1250mm	1
7	P9-C3 P1	Roller Plastic	2
9	P9-C3 P2	M10 Nut	2
10	Roller Yan Aparat	Right	1
11	M10x20 AKB Bolt	Stainless-Chrome	2
12	Roller Yan Aparat	Left	1
13	1635H2200B0	Passenger Side Rear Bracket	1
14	1635H2200B0	Driver Side Rear Bracket	1
15	1635H2200F0	Passenger Side Front Bracket	1
16	1635H2200F0	Driver Side Front Bracket	1
17	1635H2200BF1	Bracket's Seperate Part	6
18	M8x25 AKB Bolt	Stainless-Chrome	12
19	M8 Spring Washer	Stainless-Chrome	12
20	M8 Wide Washer	Stainless-Chrome	12
21	M8 Bolt's Cab	Black-Plastic	30
22	M8x25 Allen Bolt	Stainless-Chrome	16
23	M8x20 AKB Bolt	Stainless-Chrome	18
24	M8 Lock Nut	Stainless-Chrome	18
25	M6x16 Allen Bolt	Stainless-Chrome	4
26	M6 Spring washer	Stainless-Chrome	4
27	Sista Silikon	Silikon Package	1

INSTALLING BRACKETS TO THE ROOF RACK

REAR

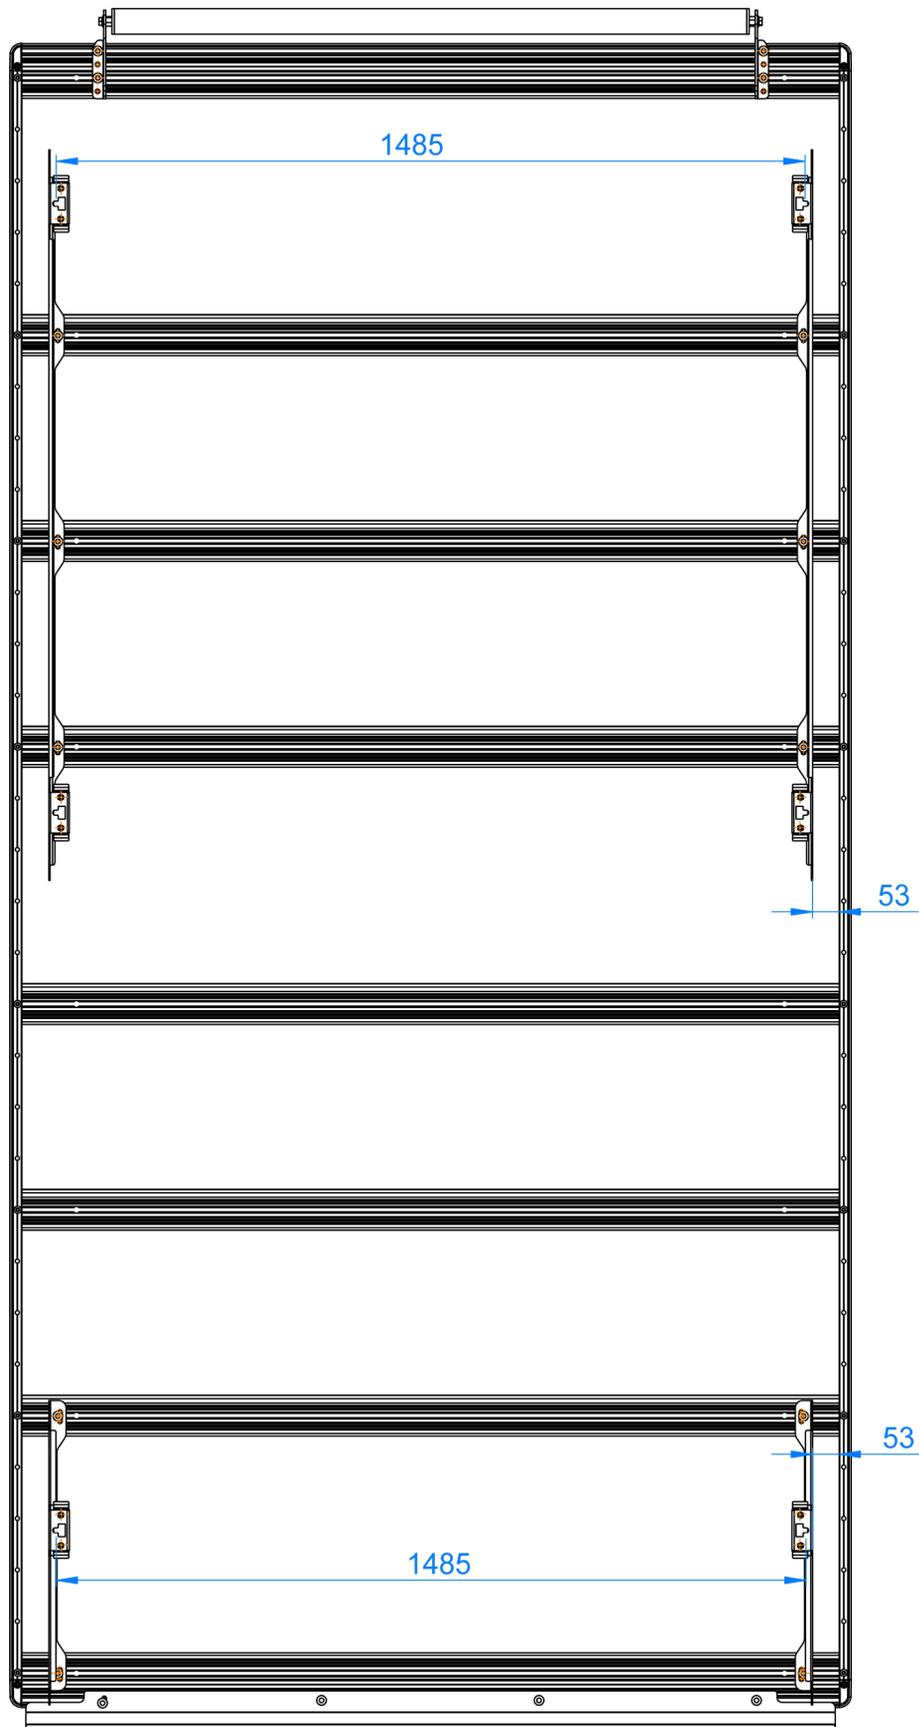

FRONT




ASSEMBLY OF THE ROOF RACK ON THE VEHICLE




STEP-1 Brackets need to be located to this factory plug on the vehicle.



STEP-2 Match the brackets with the factory plugs on the vehicle.

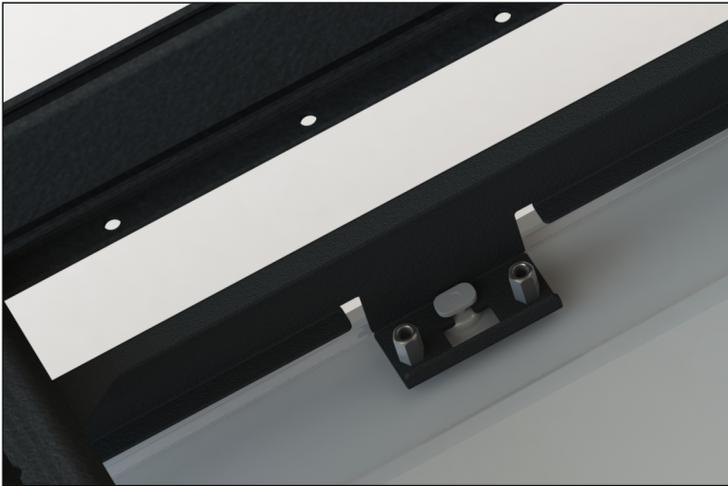

STEP-3 Pass the bracket into the plug then slide to hole as shown on figure above.

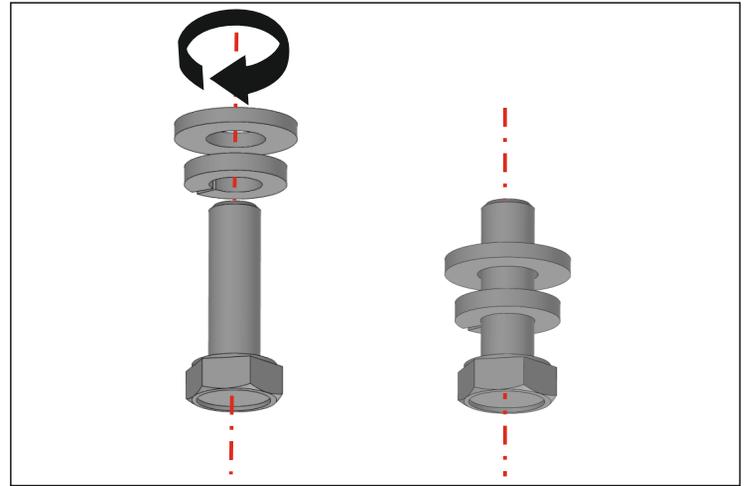

STEP-4 Attach spring washer first then flat washer to M8x25 hex bolts

STEP-5 Apply the silicon around the hole and pass to 6th step before it gets dry.



STEP-6 Fix the Bracket's Separate Part with attached bolts to the rivet nuts on the brackets after locating roof rack.

CONTROL ALL INSTALLATION AND FINISH ASSEMBLY AFTER INSTALLING PLASTIC BOLT CAPS TO M8 HEX NUTS