



**VW T5-T6 2003-2024**

**145-146 KIT OR**

**INSTALLATION GUIDE**




60 min.

VW T5-T6


19-07-2024

1

# Composition

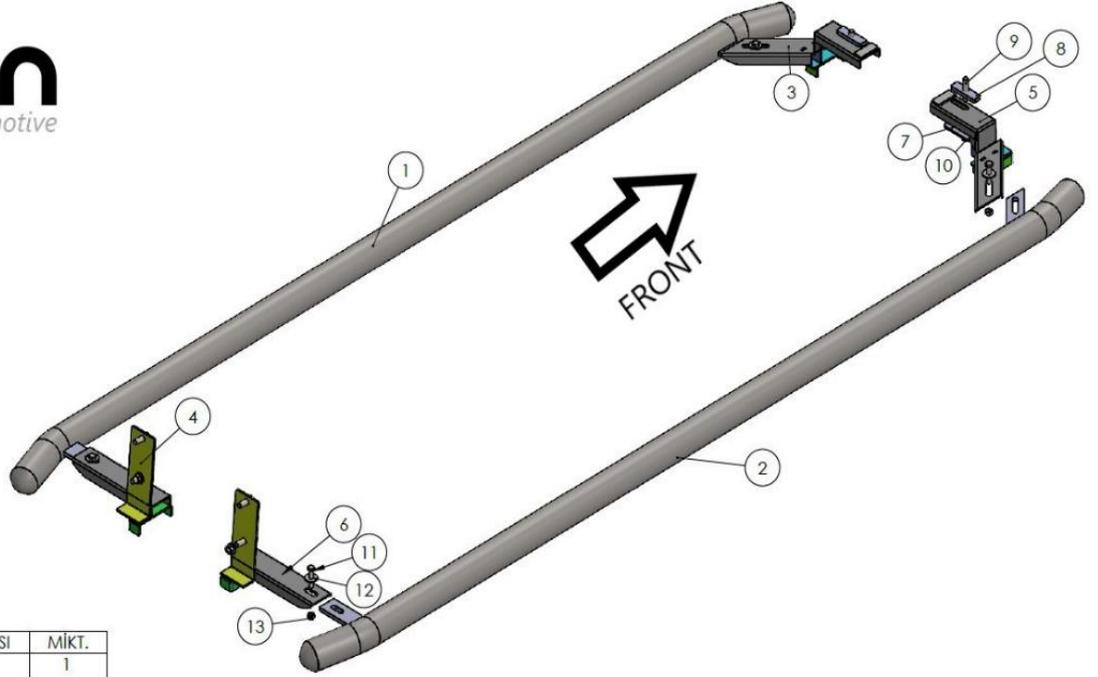

ÖGE NO.	PARÇA NUMARASI	MİKT.
1	145_SB_Driver	1
2	145_SB_Passenger	1
3	bracket-1_Driver	1
4	bracket-2_Driver	1
5	bracket-1_Passanger	1
6	bracket-2_Passenger	1
7	Krom pul	2
8	HTC OR4	2
9	M10x50 Gijon	2
10	M10 Flange Nut	6
11	M8x40 Bolt	2
12	M8 Washer	4
13	M8 Lock Nut	4

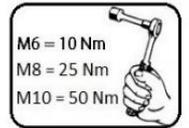

## Rear brackets:

Step 1: Tighten the nut at the top.

Step 2: Loosen 1–2 screws and bend the base plate away to create some space.



Step 3: Attach the bracket behind the housing; **the top screw is used for centring!**

Step 4: Secure the bracket by hand using the bottom screw, rivet and nut. This may be a little tricky, but it will fit.



## Front brackets L+R

Remove covers L+R



Insert the inner nut plate + threaded end into the hole.



Place bracket and mountingplate and tighten with nut

